


INSTALLATION MANUAL

MICRO SPRAY CONVERSION STARTER KIT (ITEM # MKT-01)

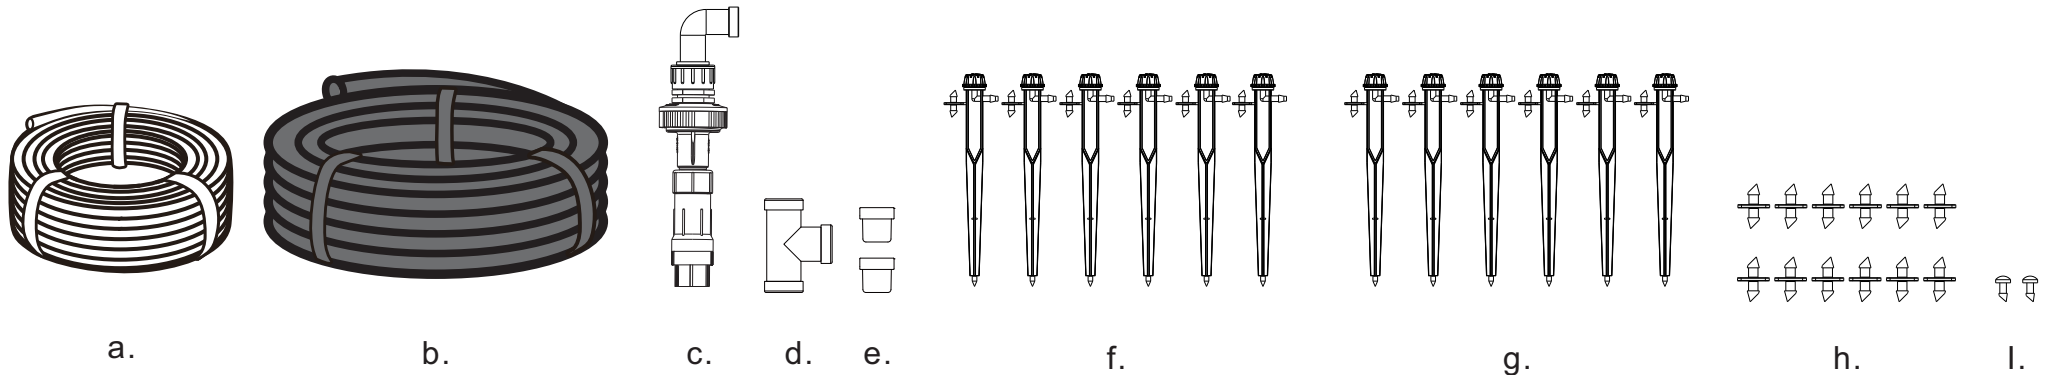

a. 1/4" 4MM PVC tubing x50FT (15.2M)

b. 1/2" 13MM PE tubing x40FT (12.2M)

c. #0301-5 Conversion Riser (1/2" femal riser with 1/2" swivel Elbow, Filter and pressure regulator included)x1

d. #5134 13MM GREENLINE TEE x1

e. #5156 13MM END CAP x2

f. #0322-360-Twista Spray on 160 Spike x6

g. #0322-180-Twista Spray on 160 Spike x6

h. #0271 4mm Jornerx12

i. #0275 4mm barbed Plug x2

INSTALLATION MANUAL

MICRO SPRAY CONVERSION STARTER KIT (ITEM # MKT-01)

